



Insulated Box Preparation


- 5 Place 'Top' cardboard tile in the box, close top flaps of the box and securely tape closed.

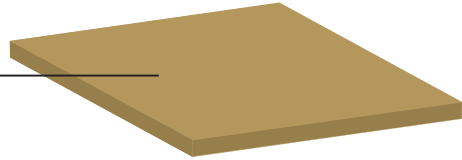


- 4 Fill any void with paper, this will add to the performance of the box.



- 3 Place the coolants in the box with your product*.
Note: a buffer between the product and coolant should be used if necessary to prevent freezing

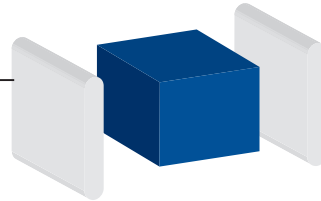

- 2 Insert the '2 piece' cardboard wall tiles.

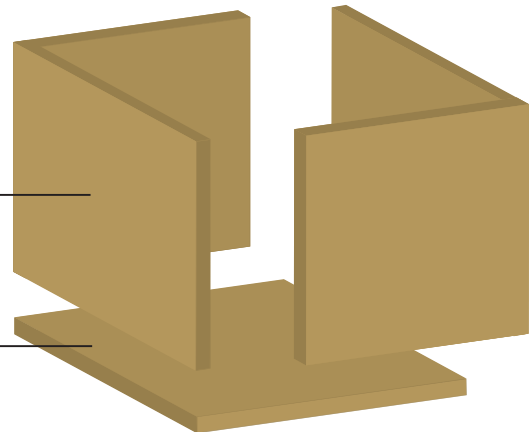

- 1 Erect box, tape bottom flaps & insert 'Bottom' cardboard tile

